

# GRID 40

# ASSEMBLY GUIDE





## Tools Required



Phillips Screwdriver



4mm Hex Bit

 
 





**Accent**  
workspace furniture solutions

# TABLE OF CONTENTS

CONFIGURATION	PAGE NUMBER	IMAGE
Grid 40	4-5	
Grid 40 Panel	6-7	

# GRID 40


*"Sample layout, your configuration maybe different"*

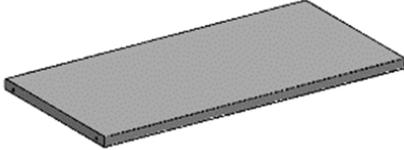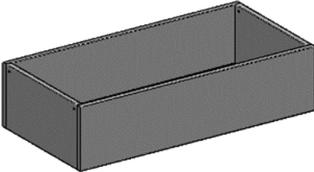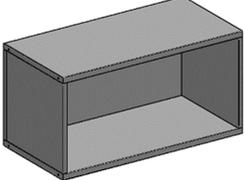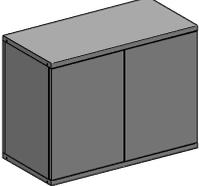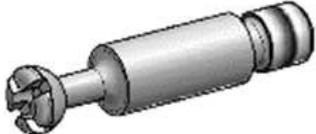PARTS NO.	NAME	IMAGE
1	End Frame	  <p>M6 threaded holes on one side only</p>
2	Middle Frame	  <p>M6 threaded holes on both side only</p>
3	Shelf	
4	Planter Box	
5	Mid Open Storage	
6	Lower Storage 2 hinged doors	
7	Bolts	
8	M6	

# GRID 40


## ASSEMBLY INSTRUCTION

### STEP 1

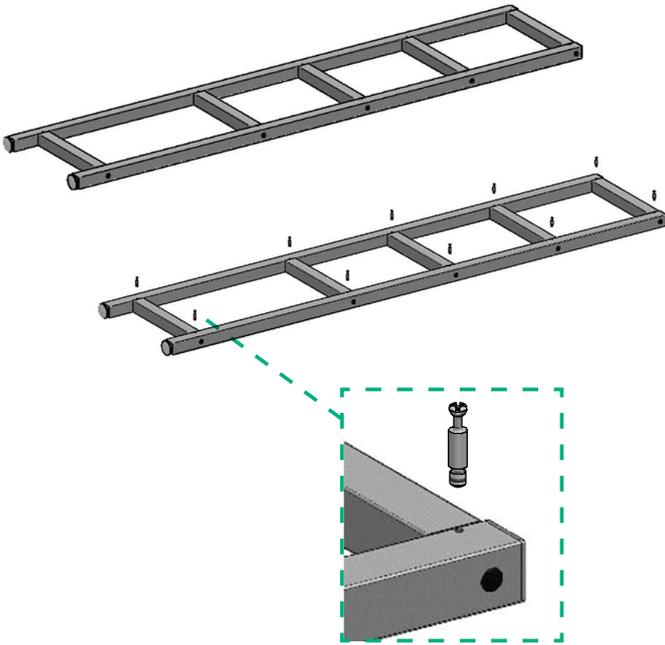


Lay end frame on the clean flat surface.  
Install pins to the frame. Install pins to all frames.  
*Note: Mid-frames have pins both sides.*

### STEP 2

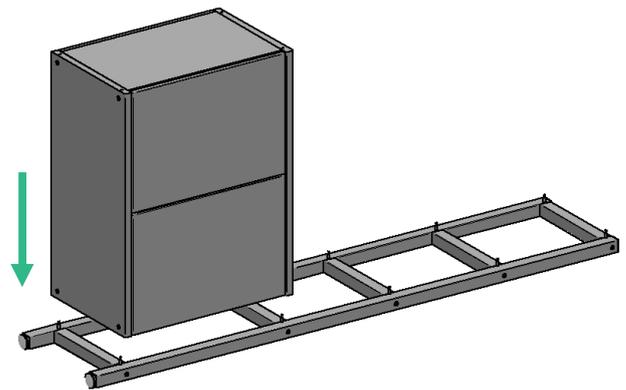


Slide Lower storage unit onto pins on the end frame.

### STEP 3

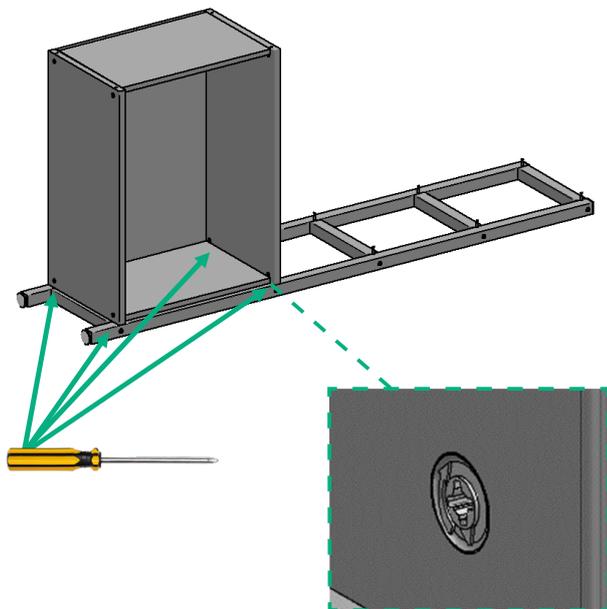

Using a screwdriver do up the cams on the Lower Storage unit. Slide the open storage on to the pins.

### STEP 4

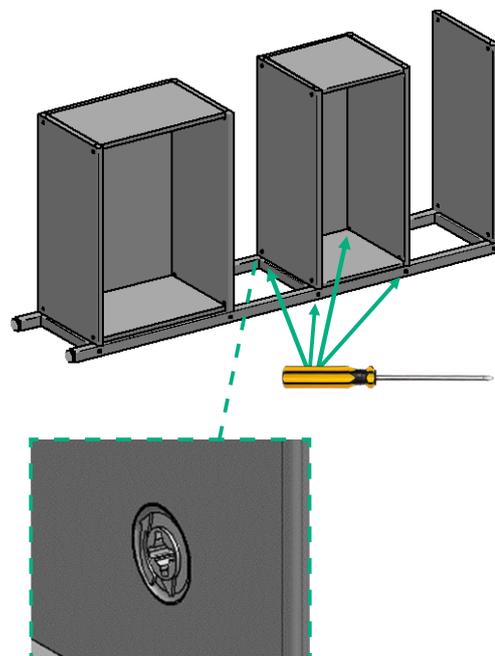


Do up the cams on the open shelf unit and install top shelf.

# GRID 40


## ASSEMBLY INSTRUCTION

### STEP 5

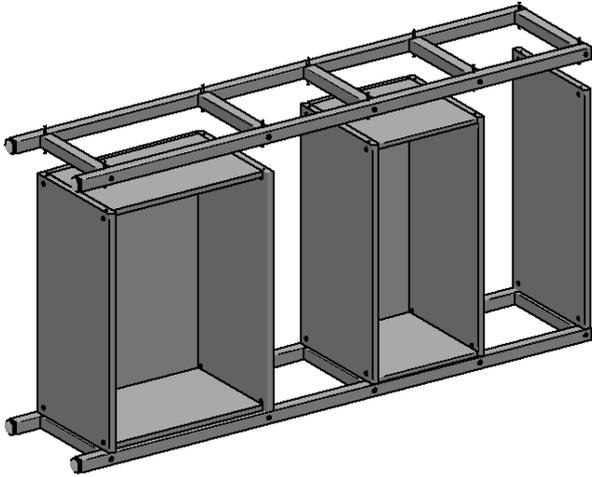


Attached mid frame.

### STEP 6

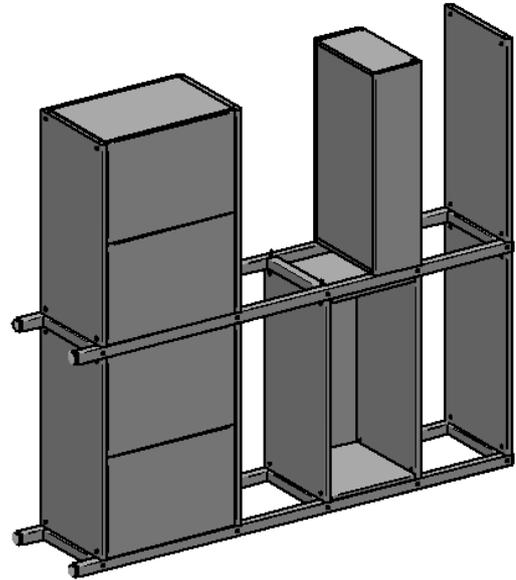


Attached lower storage unit, planter box and shelf.  
*Note: Attach planter box to the mid-frame using M6 x 25 bolts.*

### STEP 7

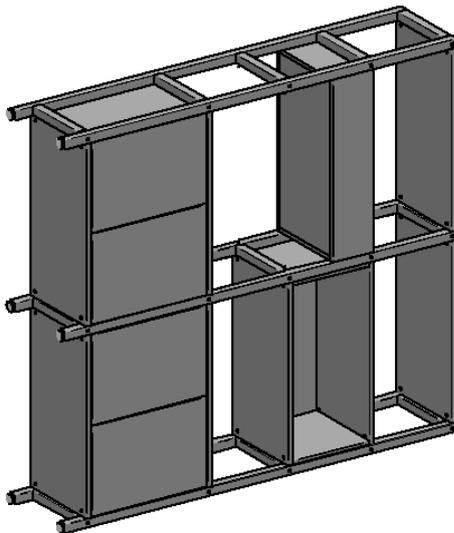

Attached end frame.


### STEP 8


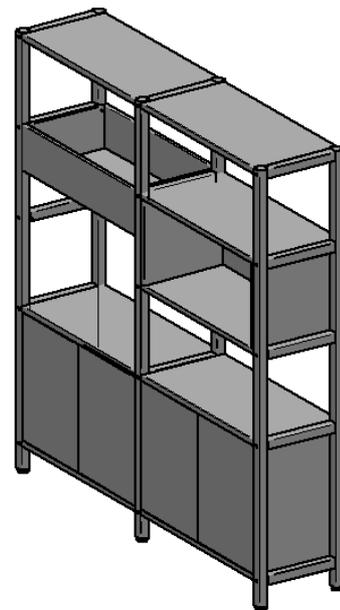


Tilt complete unit onto its back. At this stage attached any additional frames to the unit. Lift it up on to its feet.

# GRID 40 PANEL

## PARTS LIST

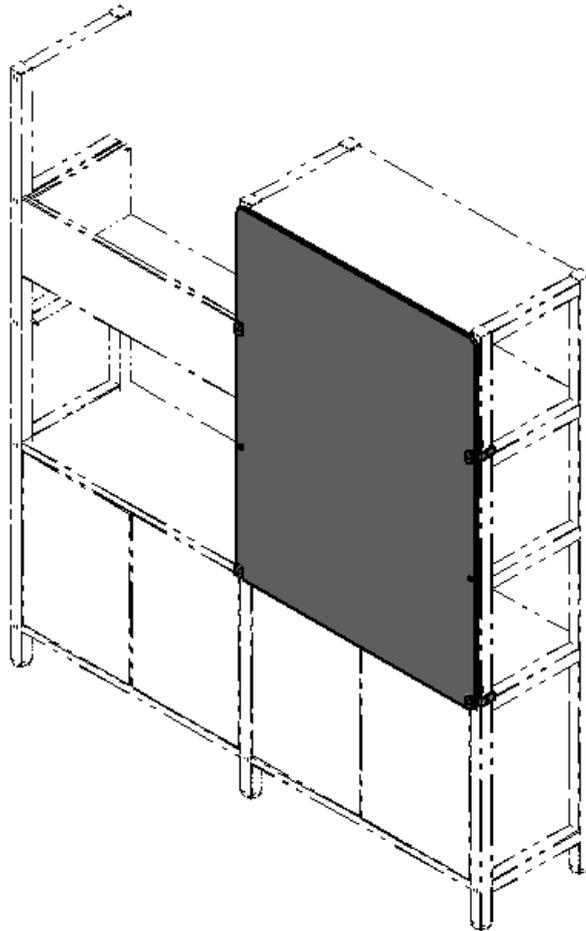


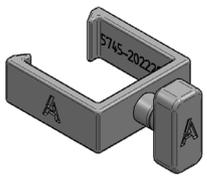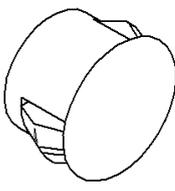NO.	NAME	QUANTITY	IMAGE
1	Panel	1pc	
2	Clamp Brackets	4pcs	
3	Caps	4pcs	

# GRID 40 PANEL


## ASSEMBLY INSTRUCTION

### STEP 1

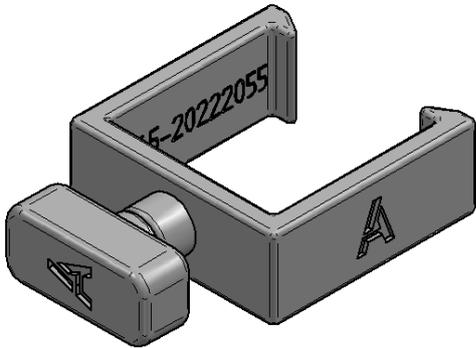


Rotate the nob 90degrees anti clock wise.

### STEP 2

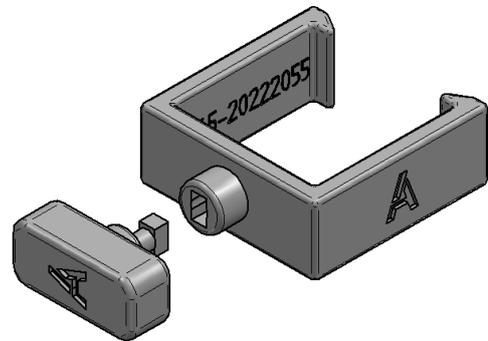


Separate the nob from the clamp bracket.

### STEP 3

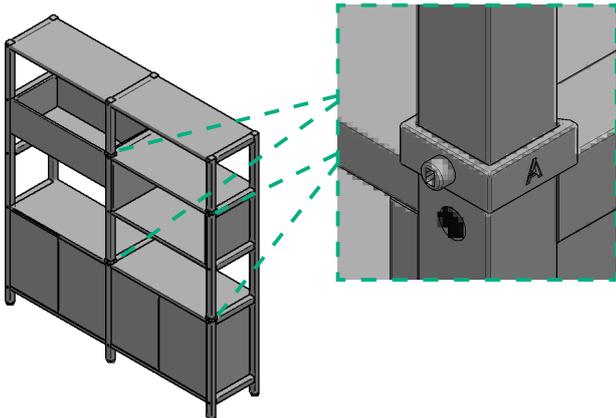


Attached clamp brackets to the Grid 40 frame.  
Make sure there are 2 clamp brackets on each frame.

### STEP 4

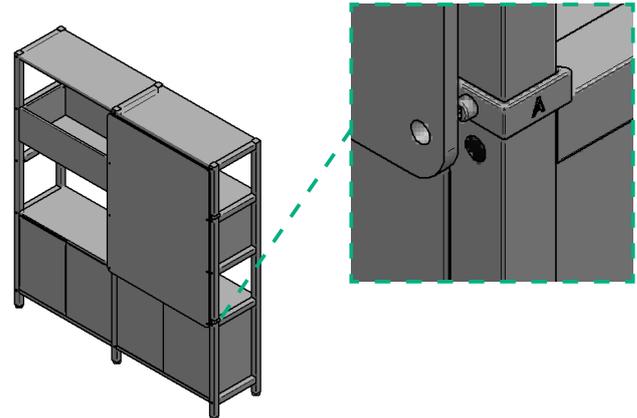


Push panel onto the clamp brackets.

### STEP 5

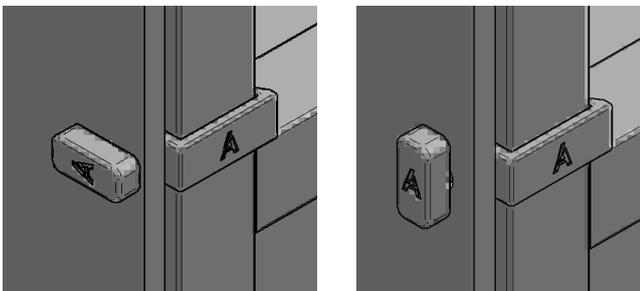

Insert the nob back into the clamp bracket and  
rotate 90degree clock wise.

### STEP 6

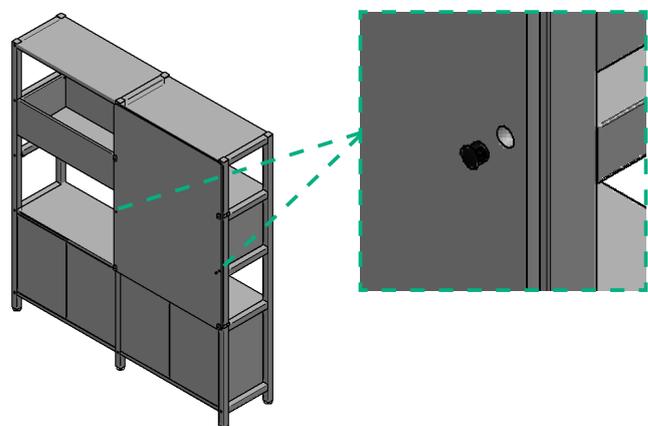

Insert the caps into the blank holes.

# FACTSHEET

## CARE & MAINTENANCE

### GENERAL CARE – INFORMATION

- Avoid scourers and abrasives as they will damage the surface.
- Don't place hot objects, electrical appliances or pots straight from the oven or cooker onto your laminate surface.
- Don't cut on the laminate surface.
- Keep waxes and polishes well away as they dull the natural shine.
- Do not use strongly acidic, alkaline cleaners or bleach for normal cleaning as these might etch the surface.

### GENERAL CARE – STREAKS

Streaky marks sometimes show on dark colours after cleaning. An all-purpose cleaner such as Mr. Muscle Surface & Glass or Ajax Spray n Wipe usually removes them.

### GENERAL CARE – GREASE

Using a mild dishwashing detergent in water will remove greasy marks. Dab, wait and wipe away. Finish with an all-purpose cleaner such as Mr. Muscle Surface & Glass or Ajax Spray n Wipe.

### GENERAL CARE – SPILLS

Laminate surfaces resist staining from most household chemicals. With some accidental spills however, prompt action is essential. Wipe off beetroot, grape and berry juices, first aid preparations, concentrated bleach, oven cleaners, dishwasher detergents, artificial dyes, hair colouring and solvent based pen ink immediately. Specialty glues such as Super Glue must also be removed straight away with acetone (nail polish remover).

### GENERAL CARE – STAINS

If the stain won't budge with Mr. Muscle Surface & Glass, try methylated spirits or dab the stain with a diluted bleach mixture (1 part bleach to 8 parts water); leave for 3 minutes then wash off with water and dry. Finish off with Mr. Muscle Surface & Glass. Only as a last resort if a stain persists try 2 or 3 rubs with a crème cleanser or white toothpaste, wash and dry. Please note that bleach or these abrasive cleaners may irreversibly damage the laminate surface.

### GENERAL CARE – SCRATCHES

Laminate surfaces will withstand normal wear and tear, but can be damaged by scratching or cutting with utensils, knives and unglazed pottery. Darker colours will show scratches more readily than lighter colours. In general, dark colours and high gloss surfaces require more care and maintenance than lighter colours or lower gloss colours. To minimise scratching, always place and lift objects from the surface – never drag or slide them across the surface.



# GRID 40

## MODULAR STORAGE SYSTEM



**0800 126 826**

**support@accentworkspaces.co.nz**

**22 Hood Street Wellsford, Auckland 0900 New Zealand**