

PINTARI FIXED HEIGHT ASSEMBLY GUIDE



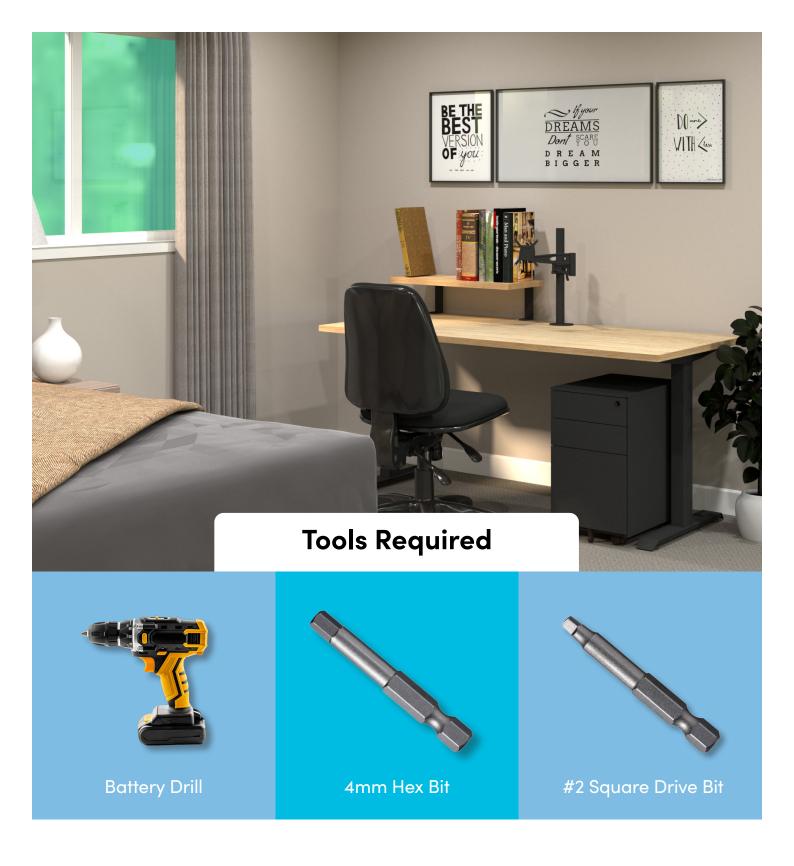




TABLE OF CONTENTS




CONFIGURATION	PAGE NUMBER	IMAGE
Single Desk	4-6	
Inline 2 Pod Desk	7-9	
Back-To-Back 2 Pod Desk	10-12	
Back-To-Back 4 Pod Desk	13-16	
90° Corner Workstation	17-20	
120° Pod	21-24	
Pintari Back-to-Back End Screen	25-26	
Care and Maintenance	27	

PINTARI FIXED HEIGHT SINGLE DESK



A. ASSEMBLY DIAGRAM

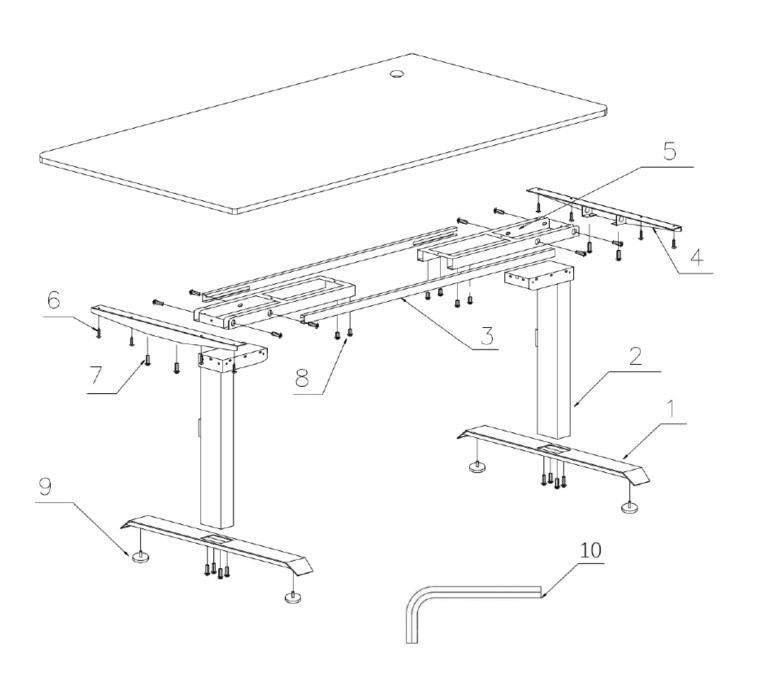

PINTARI FIXED HEIGHT hurdleys SINGLE DESK





B. PACKING LIST


NO.	HARDWARE SECTION	QUANTITY
1	Foot	2pcs
2	Height Fixed Column	2pcs
3	Extendable Tube	2pcs
4	Upper Side Support	2pcs
5	Framework	2pcs


	HARDWARE SECTION	QUANTITY
6	Screw ST6x23	12pcs
7	Bolt M6x16	20pcs
8	Bolt M6x10	8pcs
9	Leveling Glide	4pcs
10	Hex Wrench-4mm	1pc




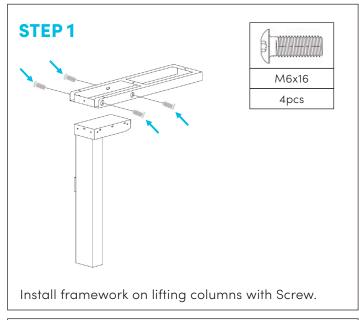

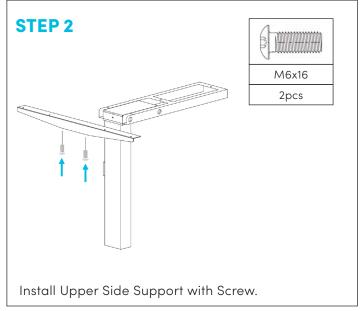

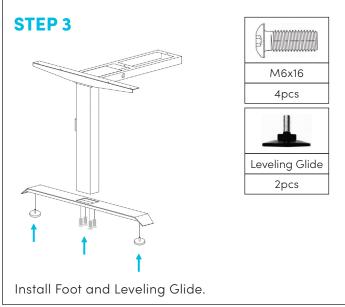

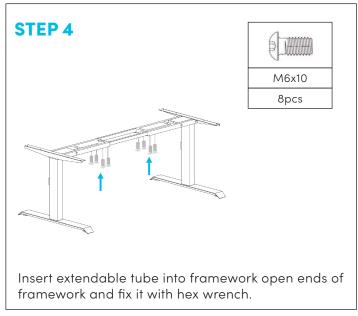

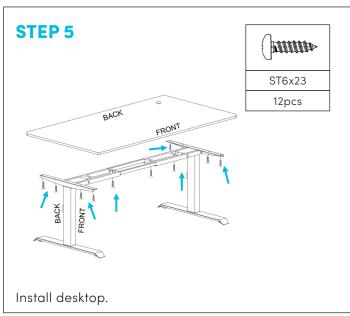




PINTARI FIXED HEIGHT INLINE 2 POD DESK



A. ASSEMBLY DIAGRAM

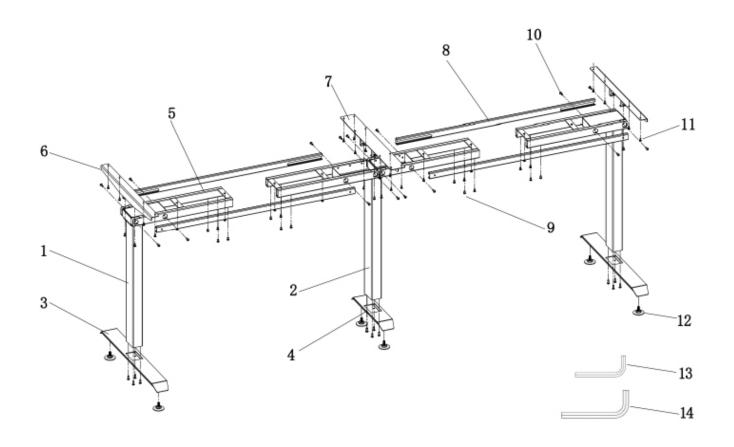

PINTARI FIXED HEIGHT INLINE 2 POD DESK





B. PACKING LIST


NO.	HARDWARE SECTION	QUANTITY
1	Height Fixed Column(Side)	2pcs
2	Height Fixed Column(Middle)	1pc
3	Foot(Long)	2pcs
4	Foot(Short)	1pc
5	Framework	4pcs
6	Upper Side Support	2pcs
7	Upper Middle Support	1pc
8	Extendable Tube	4pcs


	HARDWARE SECTION	QUANTITY
9	Bolt M6x10	16pcs
10	Bolt M6x16	36pcs
11	Screw ST6*23	24pcs
12	Leveling Glide	6pcs
13	Hex Wrench-4mm	1pc
14	Hex Wrench-5mm	1pc
15	Bolt M8x10	6pcs




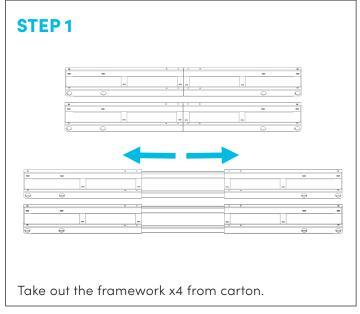


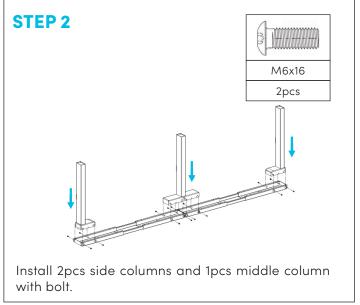

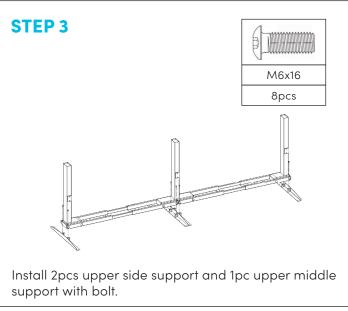

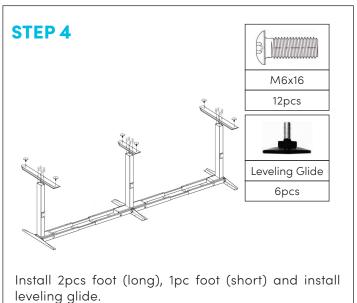

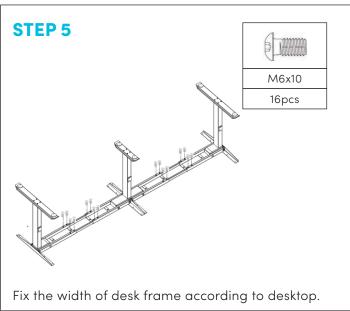


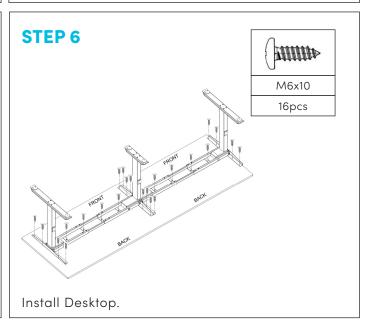

PINTARI FIXED HEIGHT BACK-TO-BACK 2 POD



A. ASSEMBLY DIAGRAM

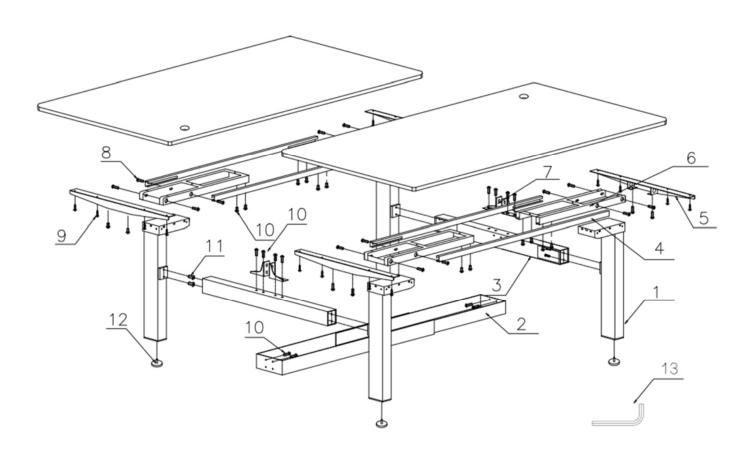

PINTARI FIXED HEIGHT BACK-TO-BACK 2 POD





B. PACKING LIST


NO.	HARDWARE SECTION	QUANTITY
1	Lifting Column	4pcs
2	Cable Tray	1pc
3	Cross Beam	2pcs
4	Extendable Tube	4pcs
5	Upper Side Support	4pcs
6	Framework	4pcs
7	L Bracket (Screen Fixing)	4pcs


	HARDWARE SECTION	QUANTITY
8	Bolt M6*16	24pcs
9	Screw ST6*23	24pcs
10	Bolt M6x10	32pcs
11	Bolt M8x10	9pcs
12	Leveling Glide	4pcs
13	Hex Wrench-4mm	1pc
14	Hex Wrench-5mm	1pc




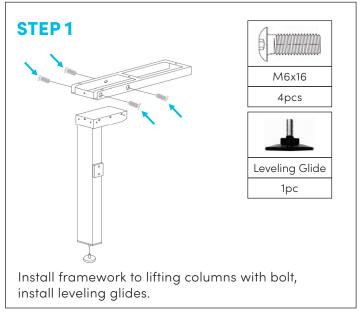

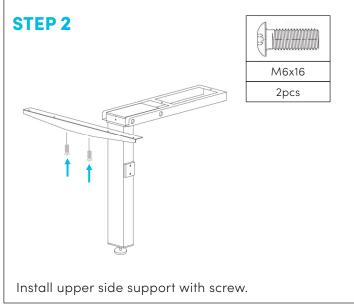

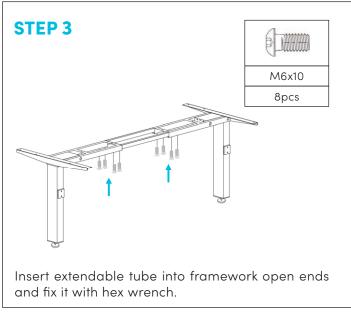

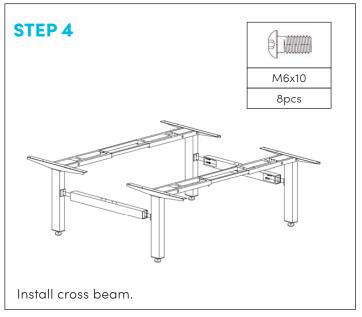

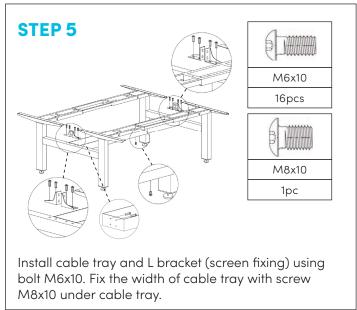




PINTARI FIXED HEIGHT BACK-TO-BACK 4 POD



A. ASSEMBLY DIAGRAM

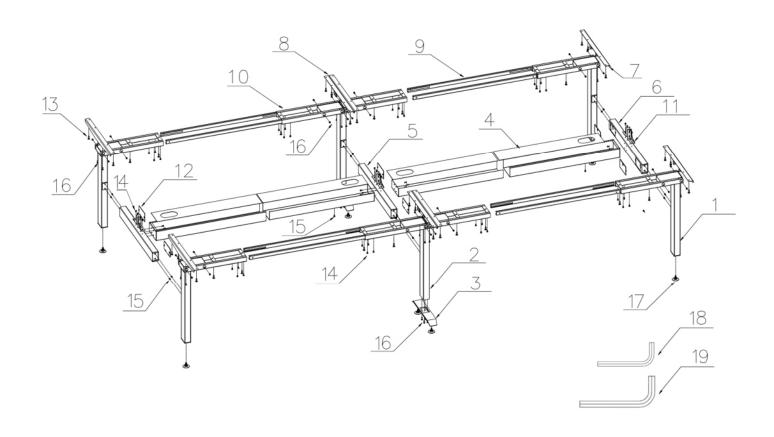

PINTARI FIXED HEIGHT BACK-TO-BACK 4 POD





B. PACKING LIST


NO.	HARDWARE SECTION	QUANTITY
1	Height Fixed Column(Side)	4pcs
2	Height Fixed Column(Middle)	2pcs
3	Foot	2pcs
4	Cable Tray	2pcs
5	Cross Beam(Middle)	1pc
6	Cross Beam(Side)	2pcs
7	Upper Side Support	4pcs
8	Upper Middle Support	2pcs
9	Extendable Tube	4pcs
10	Framework	8pcs
11	L Bracket(Screen Fixing)	6pcs
12	Plastic Cap	6pcs


	HARDWARE SECTION	QUANTITY
13	Screw ST6*23	48pcs
14	Bolt M6x10	56pcs
15	Bolt M8*10	14pcs
16	Bolt M6x16	56pcs
17	Leveling Glide	8pcs
18	Hex Wrench-4mm	1pc
19	Hex Wrench-5mm	1pc




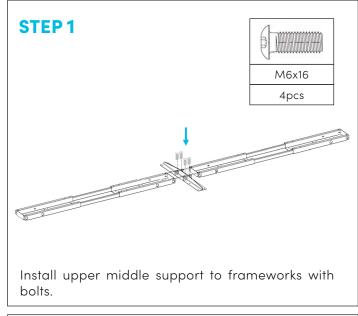


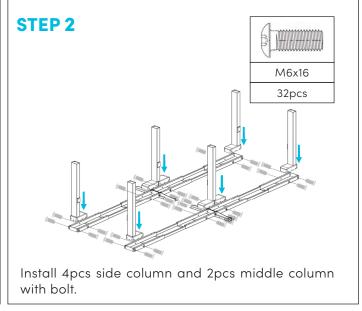

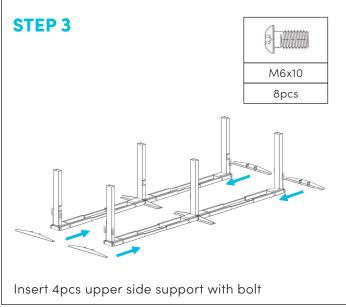


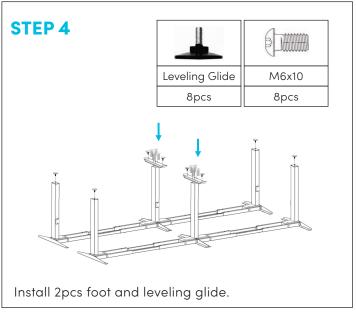


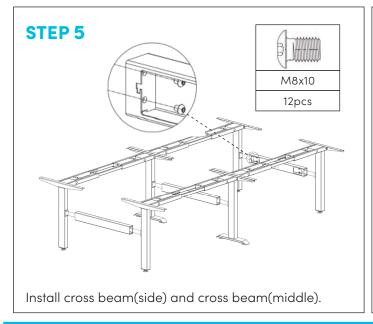


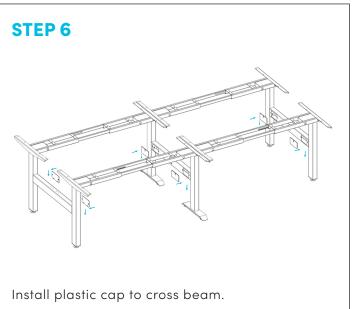



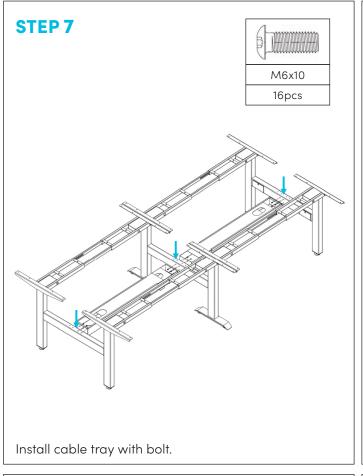

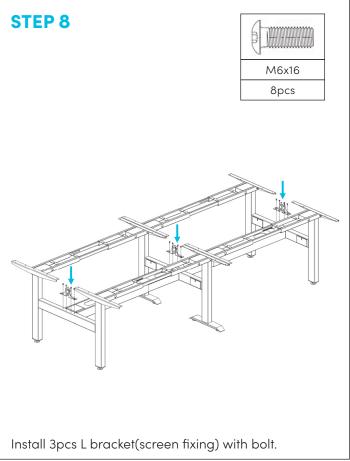


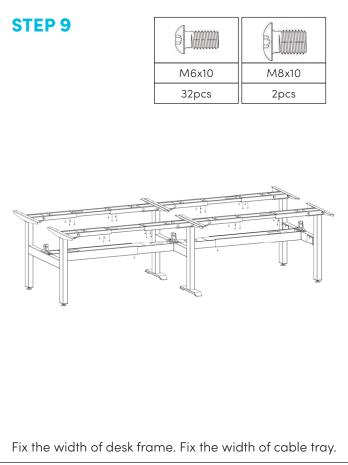



PINTARI FIXED HEIGHT hurdleys 90° CORNER WORKSTATION

A. ASSEMBLY DIAGRAM

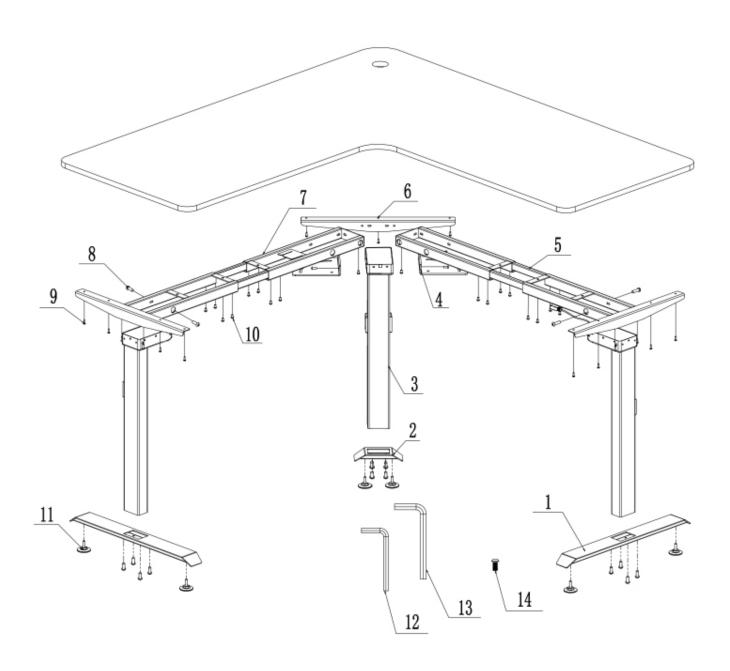


PINTARI FIXED HEIGHT hurdleys 90° CORNER WORKSTATION


B. PACKING LIST

NO.	HARDWARE SECTION	QUANTITY
1	Long Foot	2pcs
2	Short Foot	1pc
3	Lifting Column	3pcs
4	Rotation Joint	2pcs
5	Extendable Tube	4pcs
6	Upper Side Support	3pcs
7	Framework	4pcs


	HARDWARE SECTION	QUANTITY
8	Bolt M6x16	30pcs
9	Screw ST6x23	18pcs
10	Bolt M6x10	20pcs
11	Leveling Glide	6pcs
12	Hex Wrench-4mm	1pc
13	Hex Wrench-5mm	1pc
14	Bolt M8x10	10pcs



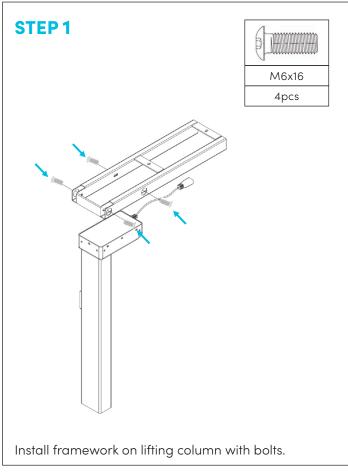


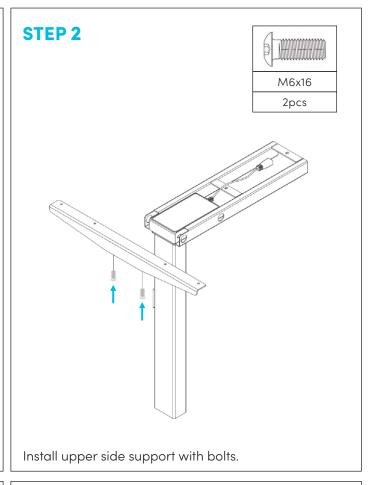





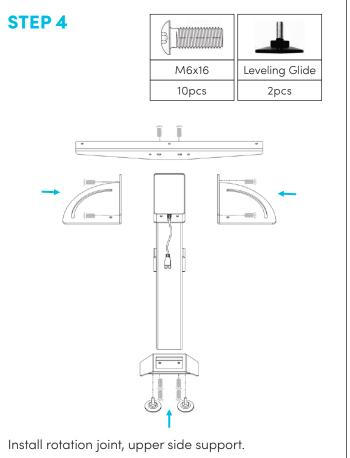



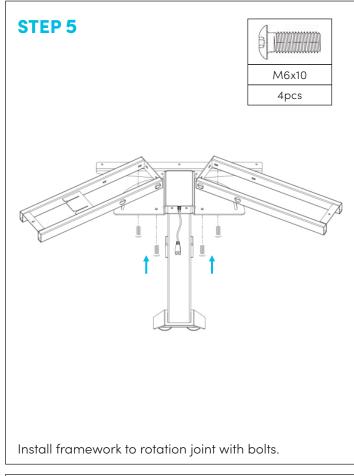

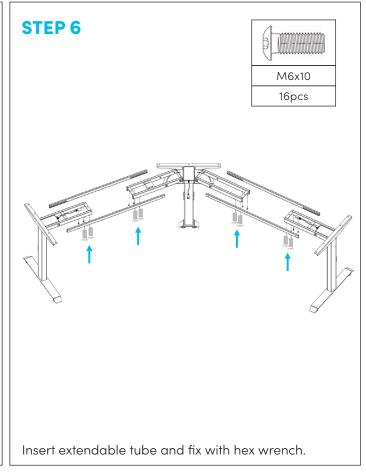


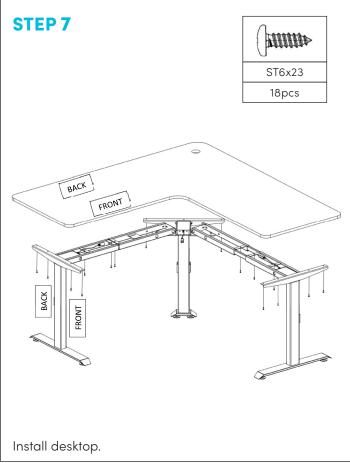



PINTARI 120° POD




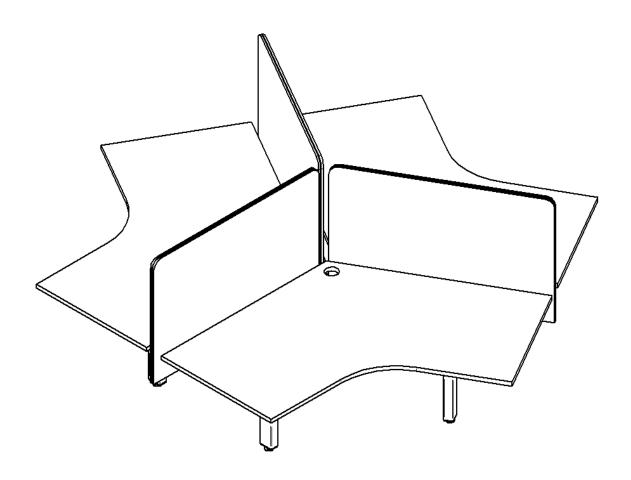



A. PARTS LIST


NO.	HARDWARE SECTION	QUANTITY
1	Desktop	3pcs
2	Summit II Electric 2 Leg Back to Back Incl Top frame	3pcs
3	Summit II Cable Tray Adjustable 640–1045mm	3pcs
4	SYSTEM 25 Summit II Centre screen 770H xL - if ordered	3pcs
5	Summit II Middle Leg 120°	1pc


hurdleys

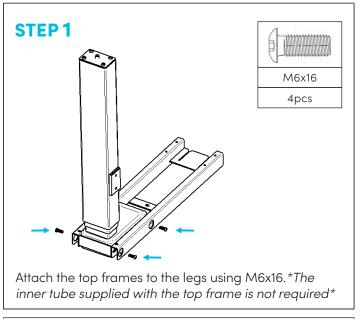


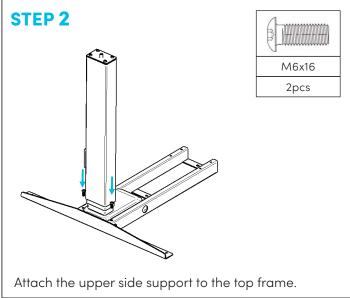

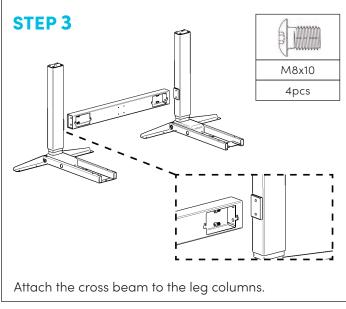


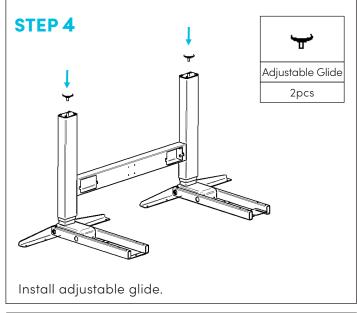


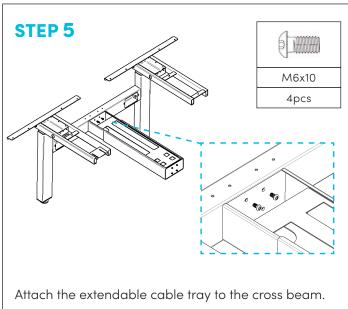


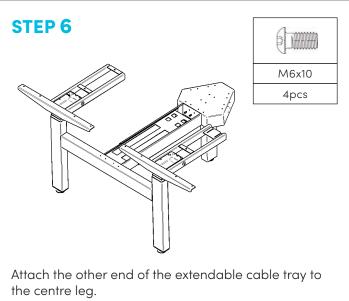





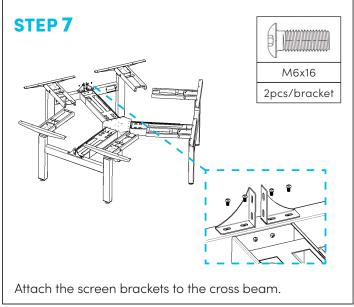


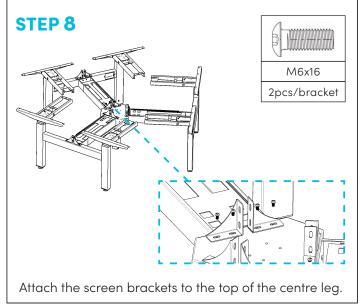

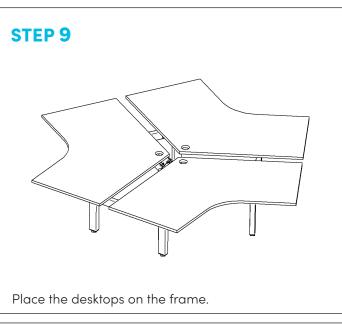


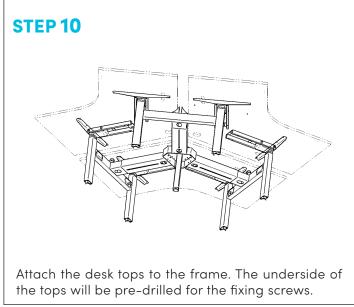

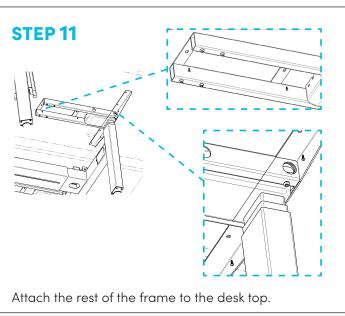

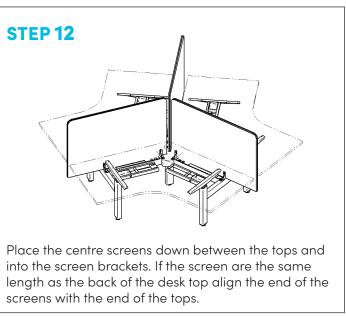




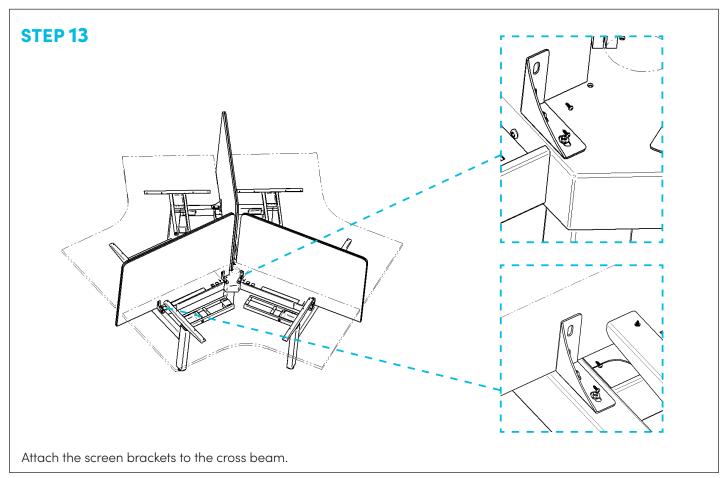



PINTARIBACK-TO-BACK END SCREEN




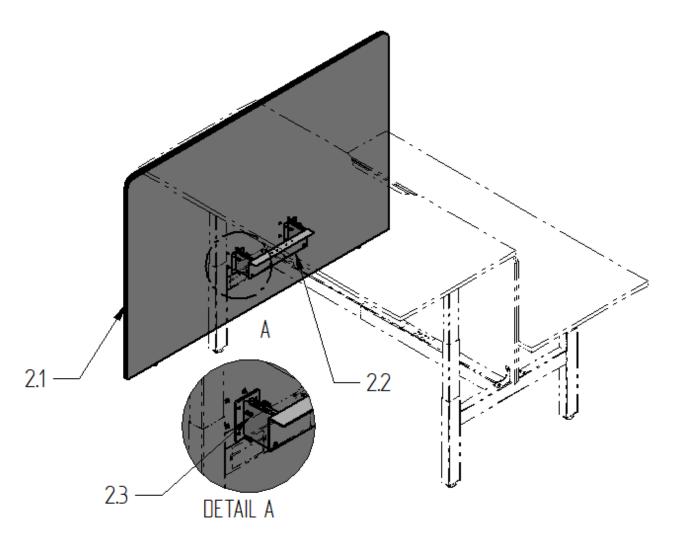



A. PARTS LIST


PARTS NO.	NAME	QUANTITY
2.1	Screen Panel	1
2.2	Pintari Cross Beam Screen Bracket	1
2.3	Bolt M6 x 16	8



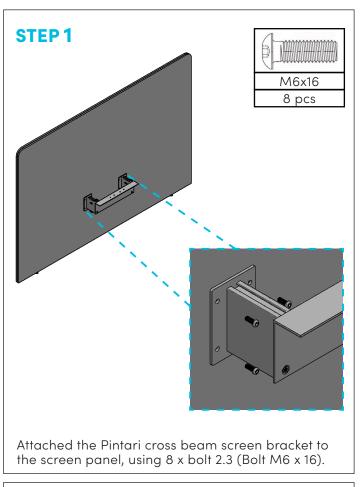

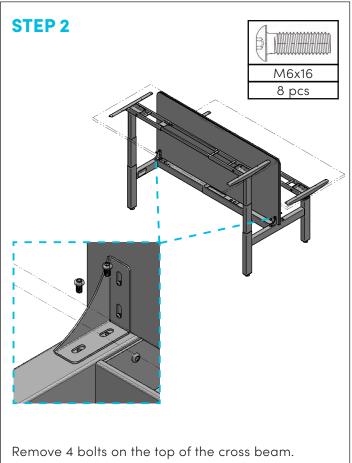

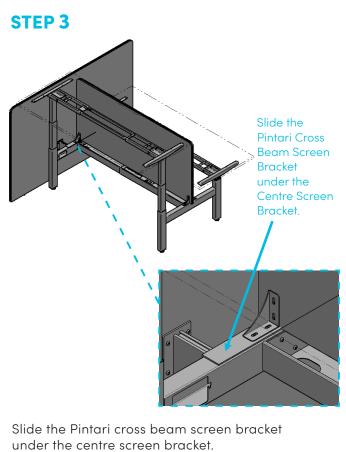

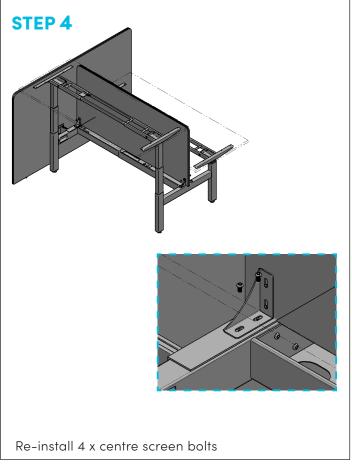



FACTSHEET CARE & MAINTENANCE

GENERAL CARE - INFORMATION

- Avoid scourers and abrasives as they will damage the surface.
- Don't place hot objects, electrical appliances or pots straight from the oven or cooker onto your laminate surface.
- Don't cut on the laminate surface.
- Keep waxes and polishes well away as they dull the natural shine.
- Do not use strongly acidic, alkaline cleaners or bleach for normal cleaning as these might etch the surface.

GENERAL CARE – STREAKS

Streaky marks sometimes show on dark colours after cleaning. An all-purpose cleaner such as Mr. Muscle Surface & Glass or Ajax Spray n Wipe usually removes them.

GENERAL CARE – GREASE

Using a mild dishwashing detergent in water will remove greasy marks. Dab, wait and wipe away. Finish with an all-purpose cleaner such as Mr. Muscle Surface & Glass or Ajax Spray n Wipe.

GENERAL CARE - SPILLS

Laminate surfaces resist staining from most household chemicals. With some accidental spills however, prompt action is essential. Wipe off beetroot, grape and berry juices, first aid preparations, concentrated bleach, oven cleaners, dishwasher detergents, artificial dyes, hair colouring and solvent based pen ink immediately. Specialty glues such as Super Glue must also be removed straight away with acetone (nail polish remover).

GENERAL CARE - STAINS

If the stain won't budge with Mr. Muscle Surface & Glass, try methylated spirits or dab the stain with a diluted bleach mixture (1 part bleach to 8 parts water); leave for 3 minutes then wash off with water and dry. Finish off with Mr. Muscle Surface & Glass. Only as a last resort if a stain persists try 2 or 3 rubs with a crème cleanser or white toothpaste, wash and dry. Please note that bleach or these abrasive cleaners may irreversibly damage the laminate surface.

GENERAL CARE - SCRATCHES

Laminate surfaces will withstand normal wear and tear, but can be damaged by scratching or cutting with utensils, knives and unglazed pottery. Darker colours will show scratches more readily than lighter colours. In general, dark colours and high gloss surfaces require more care and maintenance than lighter colours or lower gloss colours. To minimise scratching, always place and lift objects from the surface – never drag or slide them across the surface.

Version #311023